


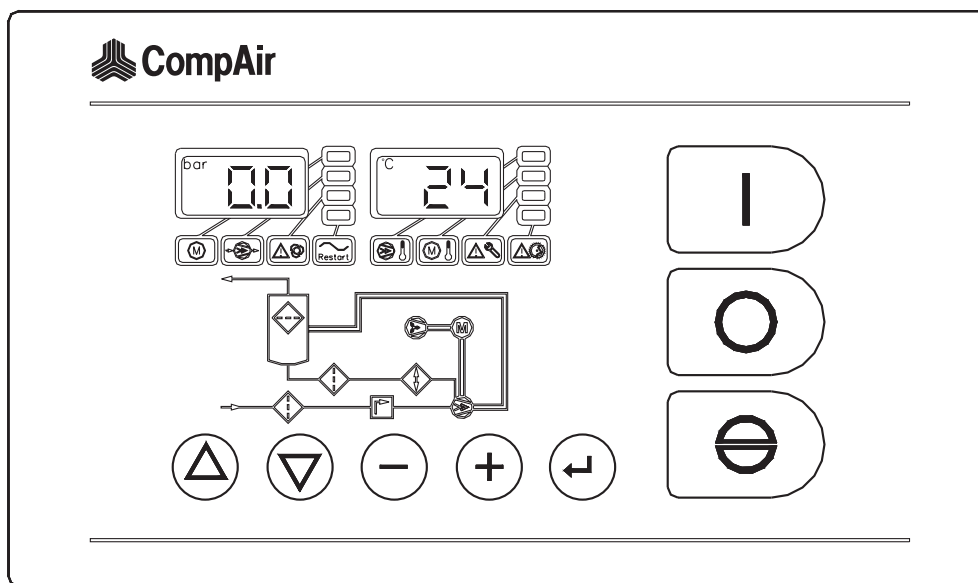

SM 1345

Key to Buttons

-  **START**
-  **STOP**
-  **RESET:** Resets Faults/Warnings
-  **UP:** Scrolls Up in Menu Routines
-  **DOWN:** Scrolls Down in Menu Routines
-  **MINUS:** Scrolls Left/Decreases Values
-  **RIGHT:** Scrolls Right/Increases Values
-  **ENTER:** Selects/Confirms Values

Access Code

From "Press. & Temp." display:

Press and hold  &  buttons for 5 seconds

Enter Code:       

Main Selection Menu

Mains Pressure: Network Pressure and Pressure Settings

Note: Not accessible on pressure switch-controlled models (L04 & L05)

Operating Times: Running and Loaded Hours

Maintenance: Service Times

Operating Mode: Operating Settings

Factory Pre-setting: Default Values

See overleaf for details

Delcos 1000 - Main Menu Structure (Examples Only)

Change of settings
if the settings are to be changed, select the corresponding menu point and press the key.
The setting value will flash and can now be changed with the or keys. This does not apply to factory pre-settings, with the exception of the (Starts per hour) settings.
(see "Change coasting time" within the user manual).

* Hold down for 5 seconds

Operating times	
Load hours	
Operating hours	
Mains pressure	Press. & Temp. display
Mains pressure display	
Pressure band 1, cut-out pressure	
Pressure band 1, cut-in pressure	
Pressure band 2, cut-in pressure	
Pressure band 2, cut-out pressure	
Pressure band 2, cut-in pressure	
Fault storage 	
Fault message indicated (Er1 = latest entry) The error codes in the right display can be found in the fault storage table (see user manual).	
Pressure band 2 can be configured via terminal block X2	

SM 1346

Maintenance	Operating mode	Factory pre-settings
Remaining time air filter Remaining time oil filter Remaining time fine separator Remaining time oil change Shutdown at ~ 100 hours	Operating mode Aut = Automatic operation cnt = Continuous operation Local/remote control Loc = Local control Etn = Remote control Automatic re-start Start delay for deferred startup(s) Limited power failure time The menu point for the additional automatic restart after power failure (PFT) is only displayed if this function has been activated. See chapter "additional automatic restart after power failure" within the user manual.	Operating pressure Startup protection Shutdown excess. comp. temp. Early warning excess. comp. temp. Start-up blockage low temp. Star/delta changeover time Max. number of starts per hour Soft-stop time Compressor number Protocol
Access Code Accessible and Visible on code entry only From Press. & Temp. display :- Press and hold & buttons for 5 seconds (display changes to:) Enter code:		