AirSmart Controller Quick Reference Guide





Passwords

Distributor – 407 Program I/O – 8412

LED Indications

Red Shutdown LED

Blinking: Active fault

Solid: Fault no longer active, needs reset

Amber Service LEDSolid: Active advisory **Green Automatic LED**

Solid: Compressor enabled

White Power LED Solid: Power on

Document Numbers

13-17-600 AirSmart Controller Manual
13-17-602 AirSmart Programming Procedure
13-17-604 Communications Module Manual

Button Functions



Start the compressor



Stop the compressor, acknowledge & reset shutdown faults and exit the adjustment menu



Increase & decrease the values of a selected parameter while in the edit mode



Navigate vertically & horizontally to the next item in a menu



Acknowledge a service advisory, enter the adjustment menu, select parameter for editing and save parameter




Navigate horizontally to the next Operational or Adjustment menu

Language Selection



Press and hold for 5 seconds

AirSmart Controller Operational Menus (Compressor Application)

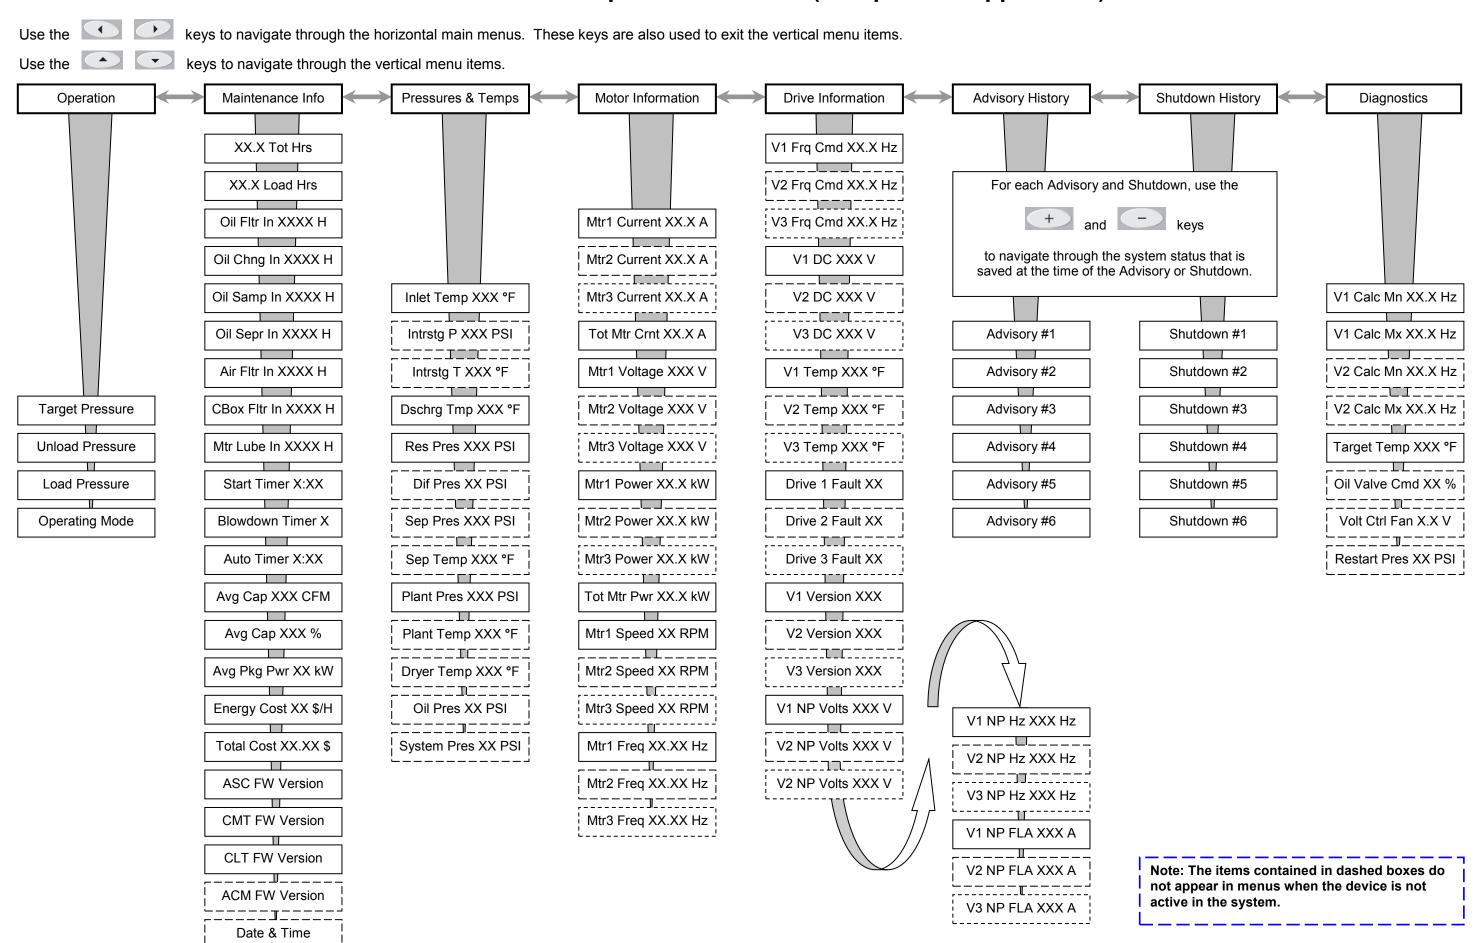

AirSmart Controller Adjustment Menus (Compressor Application)

