


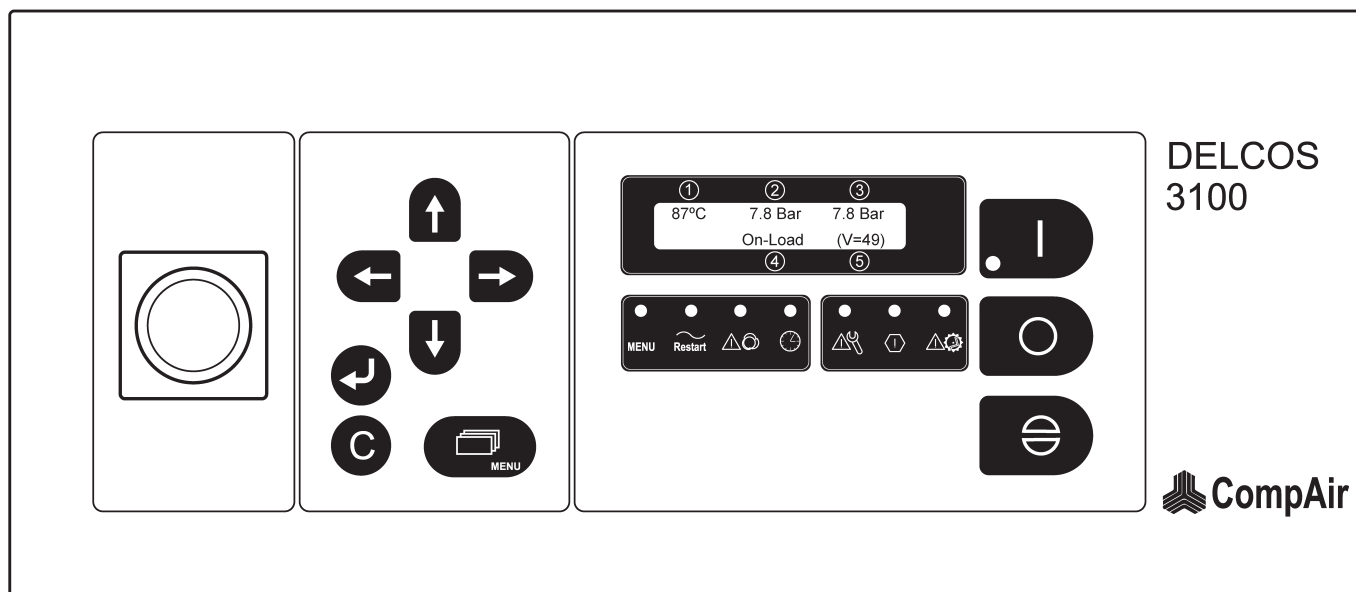

SM 1360

### Key to Status & Message Display

1. Air End Discharge Temperature
2. Compressor Pressure (Internal)
3. Line Pressure (External)
4. Status Message
5. Delivery Volume

### Key to Buttons

-  **START**
-  **STOP**
-  **RESET:** Resets Faults/Warnings \*
-  **MENU:** Enters/Closes Menu Routines
-  **CODE:** Allows Access Code Entry
-  **UP:** Scrolls Up/Increases Values
-  **DOWN:** Scrolls Down/Decreases Values
-  **LEFT:** Scrolls Left in Menu Routines
-  **RIGHT:** Scrolls Right in Menu Routines
-  **ENTER:** Selects/Confirms Values

### Other Functions

#### Language Selection



Push "ENTER" and "RESET" buttons simultaneously \*

#### Motor Speed Display



Push any 'arrow' button to activate RPM display. Push any button again to de-activate \*

### Access Codes

|                      |             |
|----------------------|-------------|
| Customer Code:       | <b>3031</b> |
| Limit Values:        | <b>3011</b> |
| Setup Code:          | <b>2222</b> |
| Maximum Speed Limit: | <b>9466</b> |
| Speed Control:       | <b>0222</b> |

### Main Selection Menu


(Software version SD31S1.08)

Maintenance Schedule  
Control Menu  
Fault Memory  
Timer Control  
Limit Values  
Optional Inputs  
Base Load Select (option)

See overleaf for details

\* only when NOT within a menu routine.

"LSR" Series - Delcos 3100 MAIN MENU STRUCTURE (Examples Only)

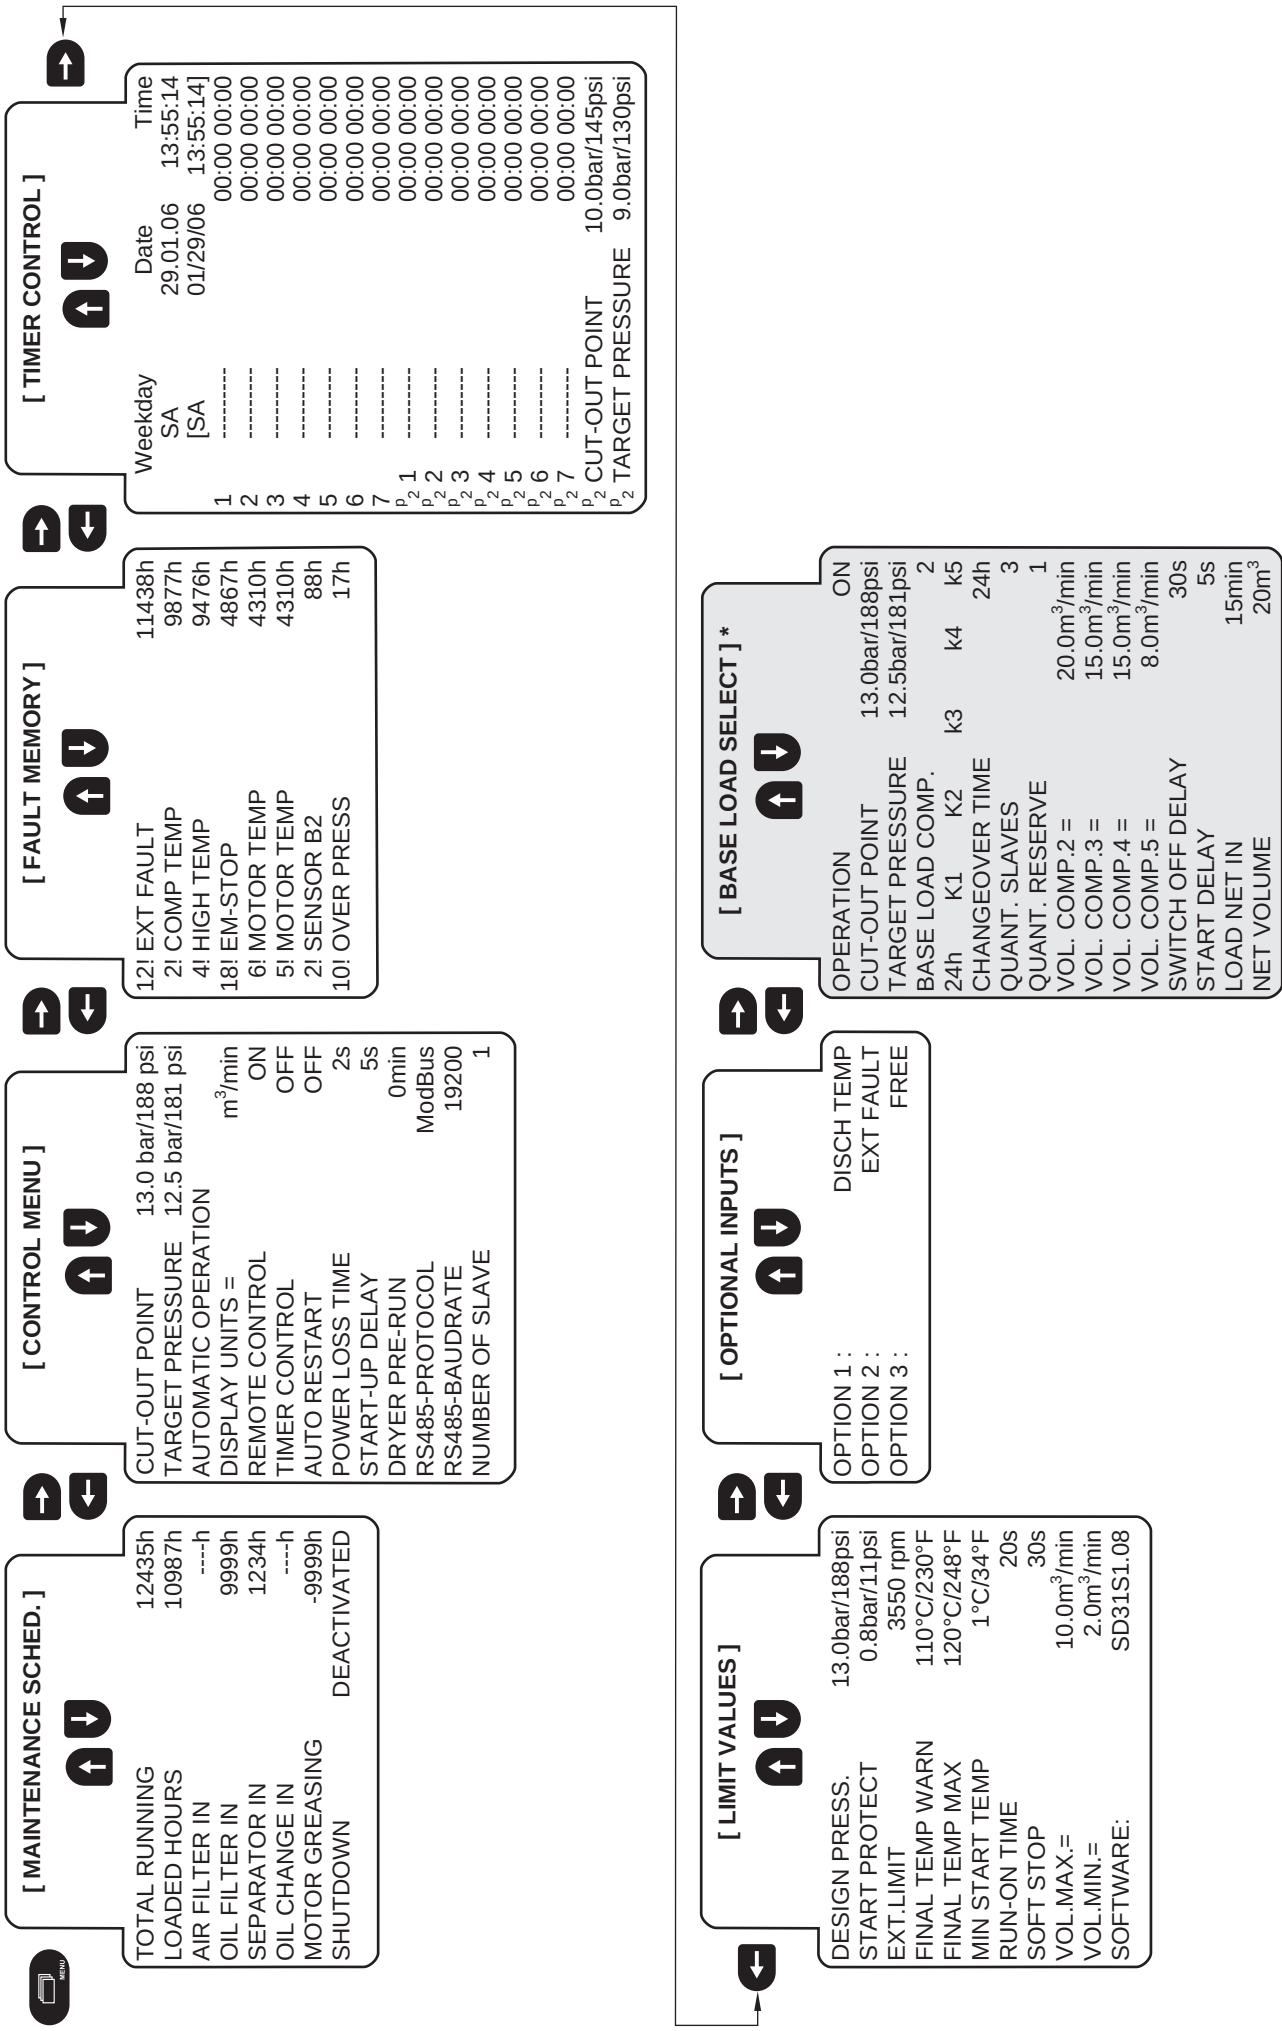

\* option