


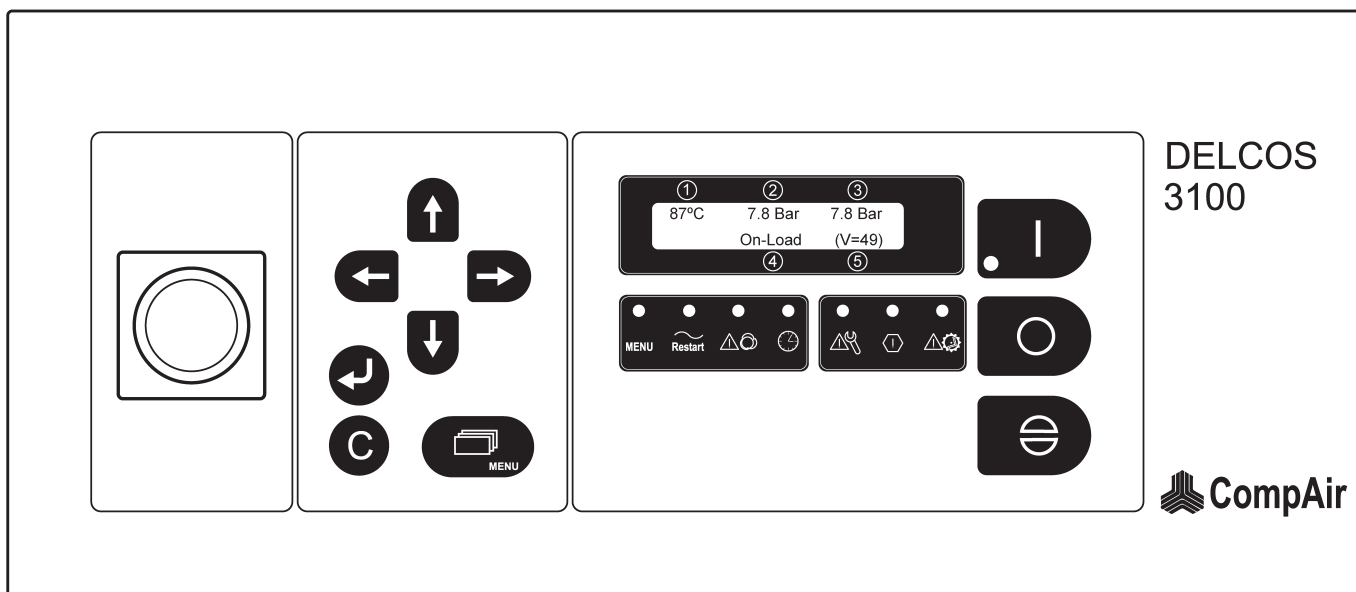

SM 1360

Key to Status & Message Display

1. Air End Discharge Temperature
2. Compressor Pressure (Internal)
3. Line Pressure (External)
4. Status Message
5. Delivery Volume

Key to Buttons

-  **START**
-  **STOP**
-  **RESET:** Resets Faults/Warnings *
-  **MENU:** Enters/Closes Menu Routines
-  **CODE:** Allows Access Code Entry
-  **UP:** Scrolls Up/Increases Values
-  **DOWN:** Scrolls Down/Decreases Values
-  **LEFT:** Scrolls Left in Menu Routines
-  **RIGHT:** Scrolls Right in Menu Routines
-  **ENTER:** Selects/Confirms Values

Other Functions

Language Selection

 +  Push "ENTER" and "RESET" buttons simultaneously *

Motor Speed Display

    Push any 'arrow' button to activate RPM display. Push any button again to de-activate *

Access Codes

Customer Code: **3031**
 Limit Values: **3011**
 Setup Code: **2222**
 Diagnostic Menus : **0111**
 PI Regulator : **3100**

Main Selection Menu (Extended)

(Software version SD31S1.08)

Configuration
 Statistic
 Diagnose Digital: Outputs / Inputs
 Diagnose Analog
 Diagnose Delcos
 Diagnose SR-Drive
 Diagnose PI - Regulator
 Diagnose MS-BUS A02
 Diagnose MS-BUS A06
 Diagnose MS-BUS A12

See overleaf for details

* only when NOT within a menu routine.

"LSR" Series - Delcos 3100 EXTENDED MENU STRUCTURE (Examples Only)

