


 
 
Reference Guide GD Pilot TS

**Gardner
Denver**

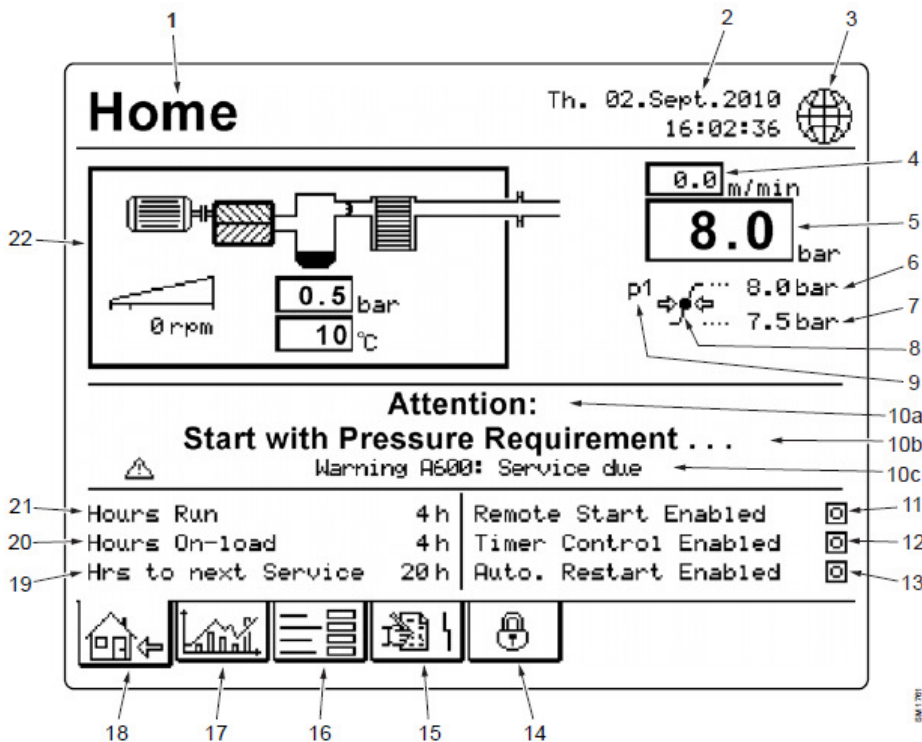

1. Display Page Name
2. Current Date/Time
3. Language Select Button
4. Current Air Output Flow Rate
5. Current Line (Network) Pressure
6. Cut-Out Point
7. **RS** Target Pressure
FS Cut-In Point

Note: Where the pressure band is controlled via other sources, the following symbols will be displayed:

-  Pressure band controlled by the RS485:1 port (**RS** only)
-  Load/Unload commands are controlled by the RS485:1 port (**FS** only)
-  Pressure band is controlled by the integrated Base Load Sequencing feature (**FS** and **RS**)

8. International "Pressure" Symbol
9. Current Pressure Band

Access Codes

Lock/Unlock	3022
Maintenance	3100
Technician	03002
Specialist	0102
Setup Code*	02213
Ext Speed Limiter	09466
∞ Auto Restart	8879
BLS Enable	1234
Alarm Logging	50

* (Defaults controller)

LED Indications

Red LED

Slow blinking: Warning
Rapidly blinking: Fault

Yellow LED

Slow blinking: Maintenance required


Green LED

Steady: System in operation
Blinking: System in standby

- 10a. Text Display - 1st Line
- 10b. Text Display - 2nd Line
- 10c. Text Display - 3rd Line
11. Remote Start Status *
12. Timer Start Control Status *
13. Auto Restart Status *
14. Access Code Entry Tab
15. Fault History Tab
16. Settings Tab
17. Trends Tab
18. Home Tab
19. Service Information Line
20. Hours On-Load Line
21. Total Hours Run Line
22. Pictogram (RS shown, FS similar)

*  = Disabled  = Enabled

GD Pilot TS Menu Structure Overview

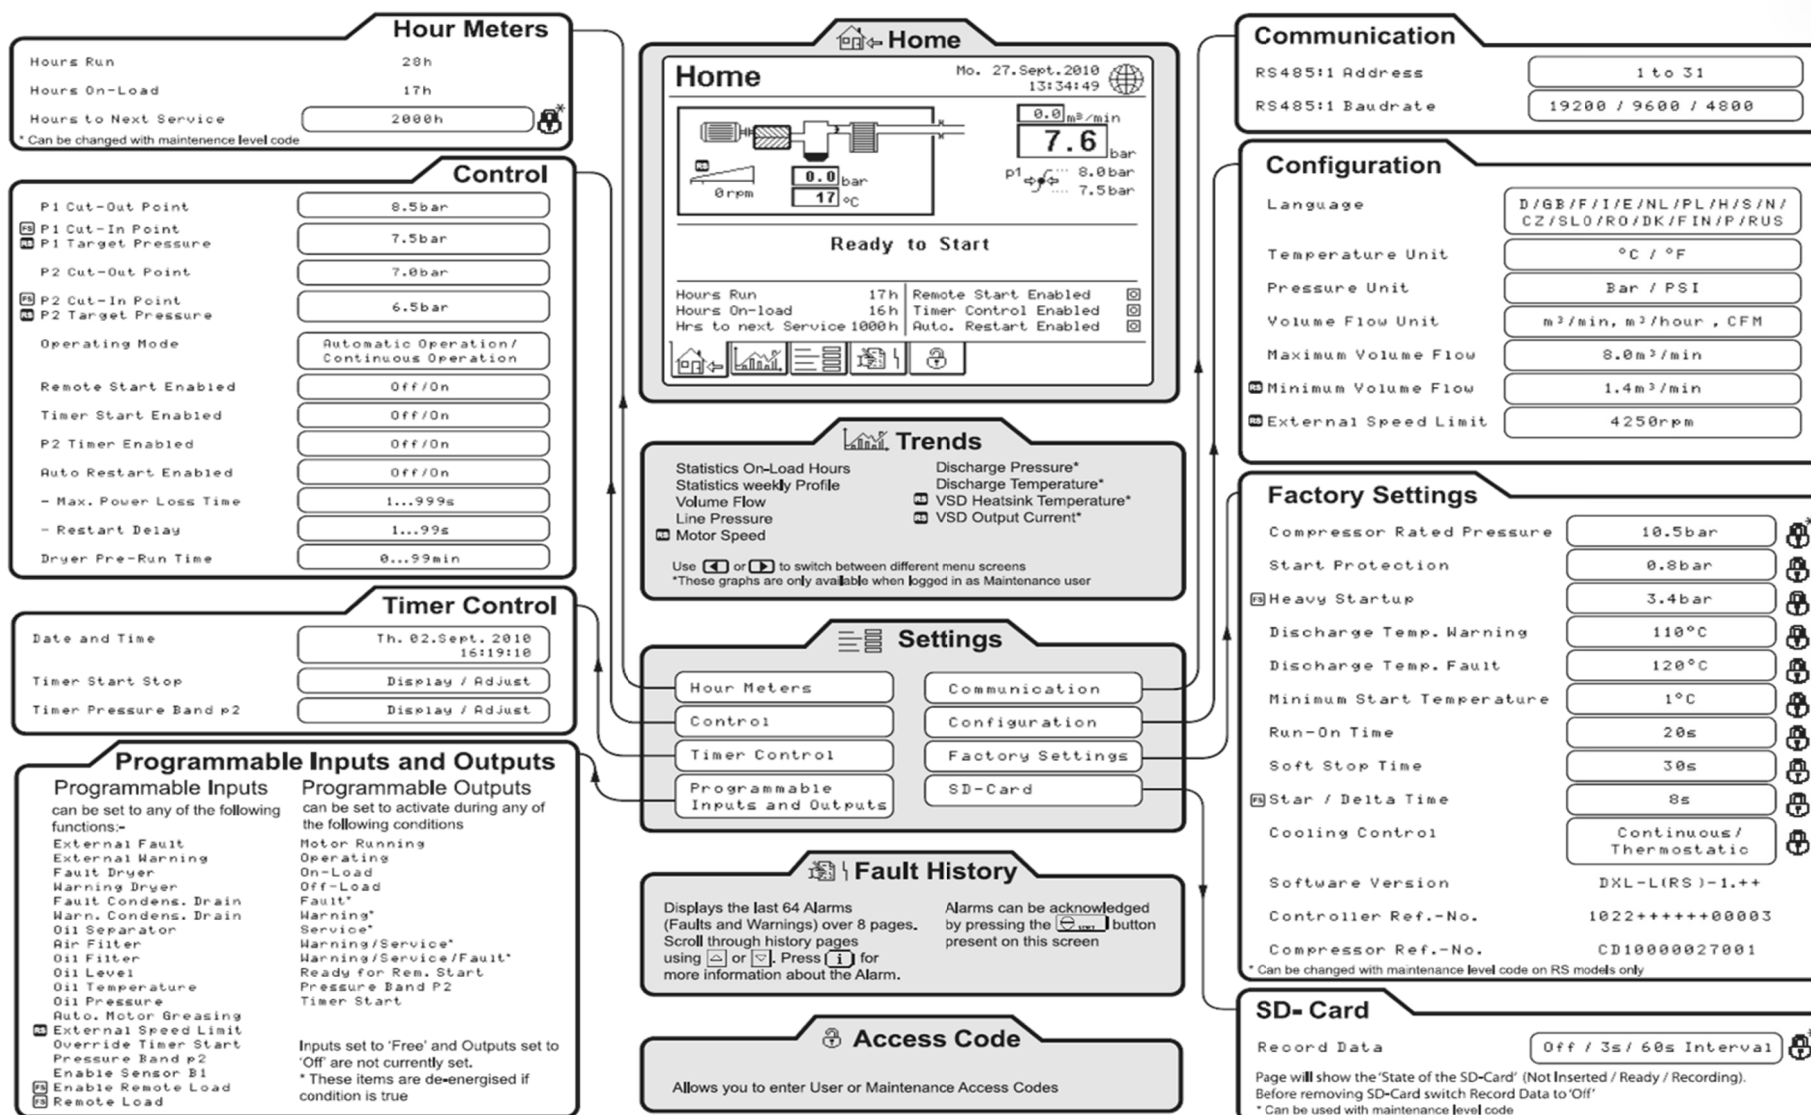

The values used throughout this page are examples only. Items marked only appear on RS models. Items marked only appear on fixed speed (non RS) models.

SM 1766