

1.8 Scrolling through all screens

From the Main screen press for 3s enter button (7) to enter in Menu and then you will find the following items:

- **Data menu:** Data counters parameters
- **Programming menu:** Submenu of regulation pressure, Timer, Display setting and Control setting.
- **Test menu:** Display test.
- **Info menu:** Information of firmware release.

Below the general overview of menu structure:

MENU

<dAtA>

- <d.1>
- <d.2>
- <d.3>
- <d.4>
- <d.5>
- <d.6>

Data menu

- Calling up running hours
- Calling up motor starts
- Calling up module hours
- Calling up loading hours
- Calling up load solenoid valve
- Calling up service timer

<ProG>

- <rEG.P>
 - <Pr.SL>
 - <LPr.1>
 - <uPr.1>
 - <LPr.2>
 - <uPr.2>
 - <nHCA>

Programming menu

Regulation Pressure submenu

- Calling up modifying pressure band selection
- Calling up modifying pressure band settings
- Calling up modifying pressure band settings
- Calling up modifying pressure band settings
- Calling up modifying pressure band settings
- Calling up Number of hourly compressor activation

<tiMr>

- <SrV.d>

Timer submenu

- Calling up Maintenance warning

<diSP>

- <tEMP>
- <PrES>
- <bC.LG>

Display submenu

- Calling up modifying unit of temperature
- Calling up modifying unit of pressure
- Calling up modifying time of backlight

<Ctrl>

- <Lo.rE>
- <Ar.Af>
- <Ar.d>

Control submenu

- Calling up Local/remote start/stop
- Calling up Automatic restart after voltage failure
- Calling up Delay Automatic restart after voltage failure

<tEst>

- <tSt.1>

Test menu

- Display testing

<info>

- <P.rEL>
- <F.rRL>
- <F.dAY>
- <F.Mnt>
- <F.YAr>
- <SEr.n>

Info menu

- Parameter Map Release
- Firmware Release
- Firmware Release Day
- Firmware Release Month
- Firmware Release Year
- Serial number

This screen shows the number of unload to load actions (x 1 or - if <x1000> lights up - x 1000). In the above example, the number of unload to load actions is 10100.

1.14 Calling up/resetting the service timer

Starting from the Main screen:

- Press Enter button (7) until enter in main menu.
- Select <dAtA> and press Enter button (7) for enter in data menu.
- Scroll up or down buttons (4-8) to <d.6> and running loaded hours is shown.
- Press Enter button (7): the loading time appears and are shown in <hrs>:
- Press and hold Enter Button (7) until <PASS> is shown.
- Scroll up or down to enter password 9989 then press Enter Button (7).
- Select <rES.Y> then press Enter Button (7)



This screen shows the unit used <hrs> (or <x1000 hrs>) and the value <1191>. In the example shown, the compressor has run 1191 hours since the previous service.

For reset timer [contact your dealer](#).

1.14.1 Changing Service timer hours

Starting from the Main screen:

- Press Enter button (7) until enter in main menu.
- Select <ProG> and press Enter button (7) to enter in data menu.
- Scroll up or down till <PASS> press Enter button (7)
- Scroll up or down to enter password 9989 then press Enter Button (7).
- Scroll up or down till <tiMr> press Enter button (7)
- <Sru.d> press Enter button (7) service hours timers hours are displayed
- Scroll up or down to adjust hours to desired level then press enter button (7)