


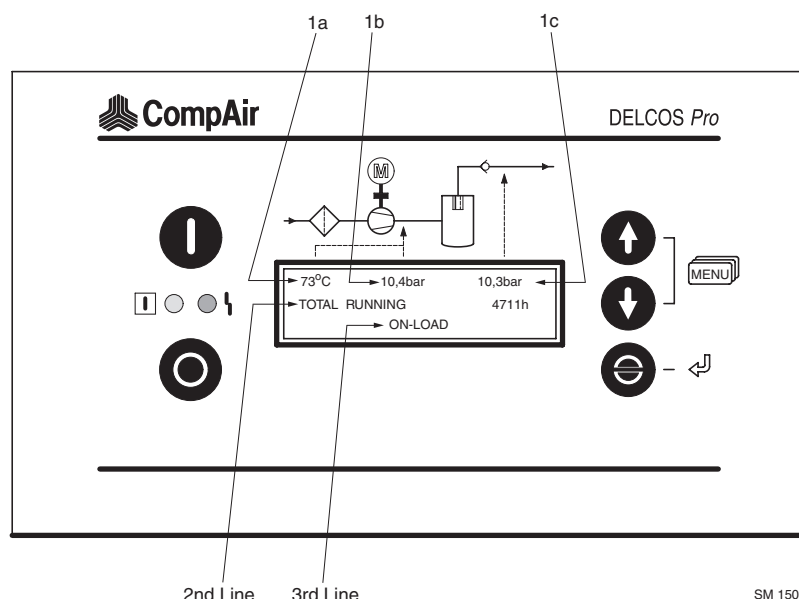

Key to Status & Message Display

1st Line:- 1a. Air End Discharge Temperature
1b. Compressor Pressure (Internal)
1c. Line Pressure (External)

Note: 1st line may also contain following symbols:-

P₂ (2nd pressure range/timer active)
⌚ (Remote start/stop activated)

2nd Line:- View/set menu values

3rd Line:- Status/Warning/Fault Messages

Key to Buttons

-  **START UNIT**
-  **STOP UNIT**
-  **UP:** Scrolls Up in Menu Routines / Increases a value
-  **DOWN:** Scrolls Down in Menu Routines / Decreases a value
-  **RESET:** Resets Faults & Warnings / Acts as "Enter" Key (↵) in sub-menus

Key to L.E.D.s

Green L.E.D.

Flashing: Unit in standby
Steady: Unit running

Red L.E.D.

Flashing slowly: Warning/Service Due (See 3rd line of display)
Flashing rapidly: Fault - Shutdown (See 3rd line of display)

Language Selection

Press and hold  button. Scroll to the required language using the   buttons.

Access Codes

Customer	3031
Factory Code	3011
Setup Code	2222
Rotation Off	9998
Rotation On	9997
Power Fail Time	8888

Accessing Menus

Press  &  buttons simultaneously to:-

- Call up or exit the main menu
- Exit a sub-menu

Press  button to enter a sub-menu.

Main Menu Structure

Maintenance Sched.
Control Menu
Fault Memory
Timer Control
Limit Values
Optional In-Outputs


Extended Menus *

Diagnose Digital
Diagnose Analog
Diagnose Delcos

* Viewable via Master Access Code only

See overleaf for details of Main and Extended Menus

Delcos Pro - Main Menu Structure (Examples Only)

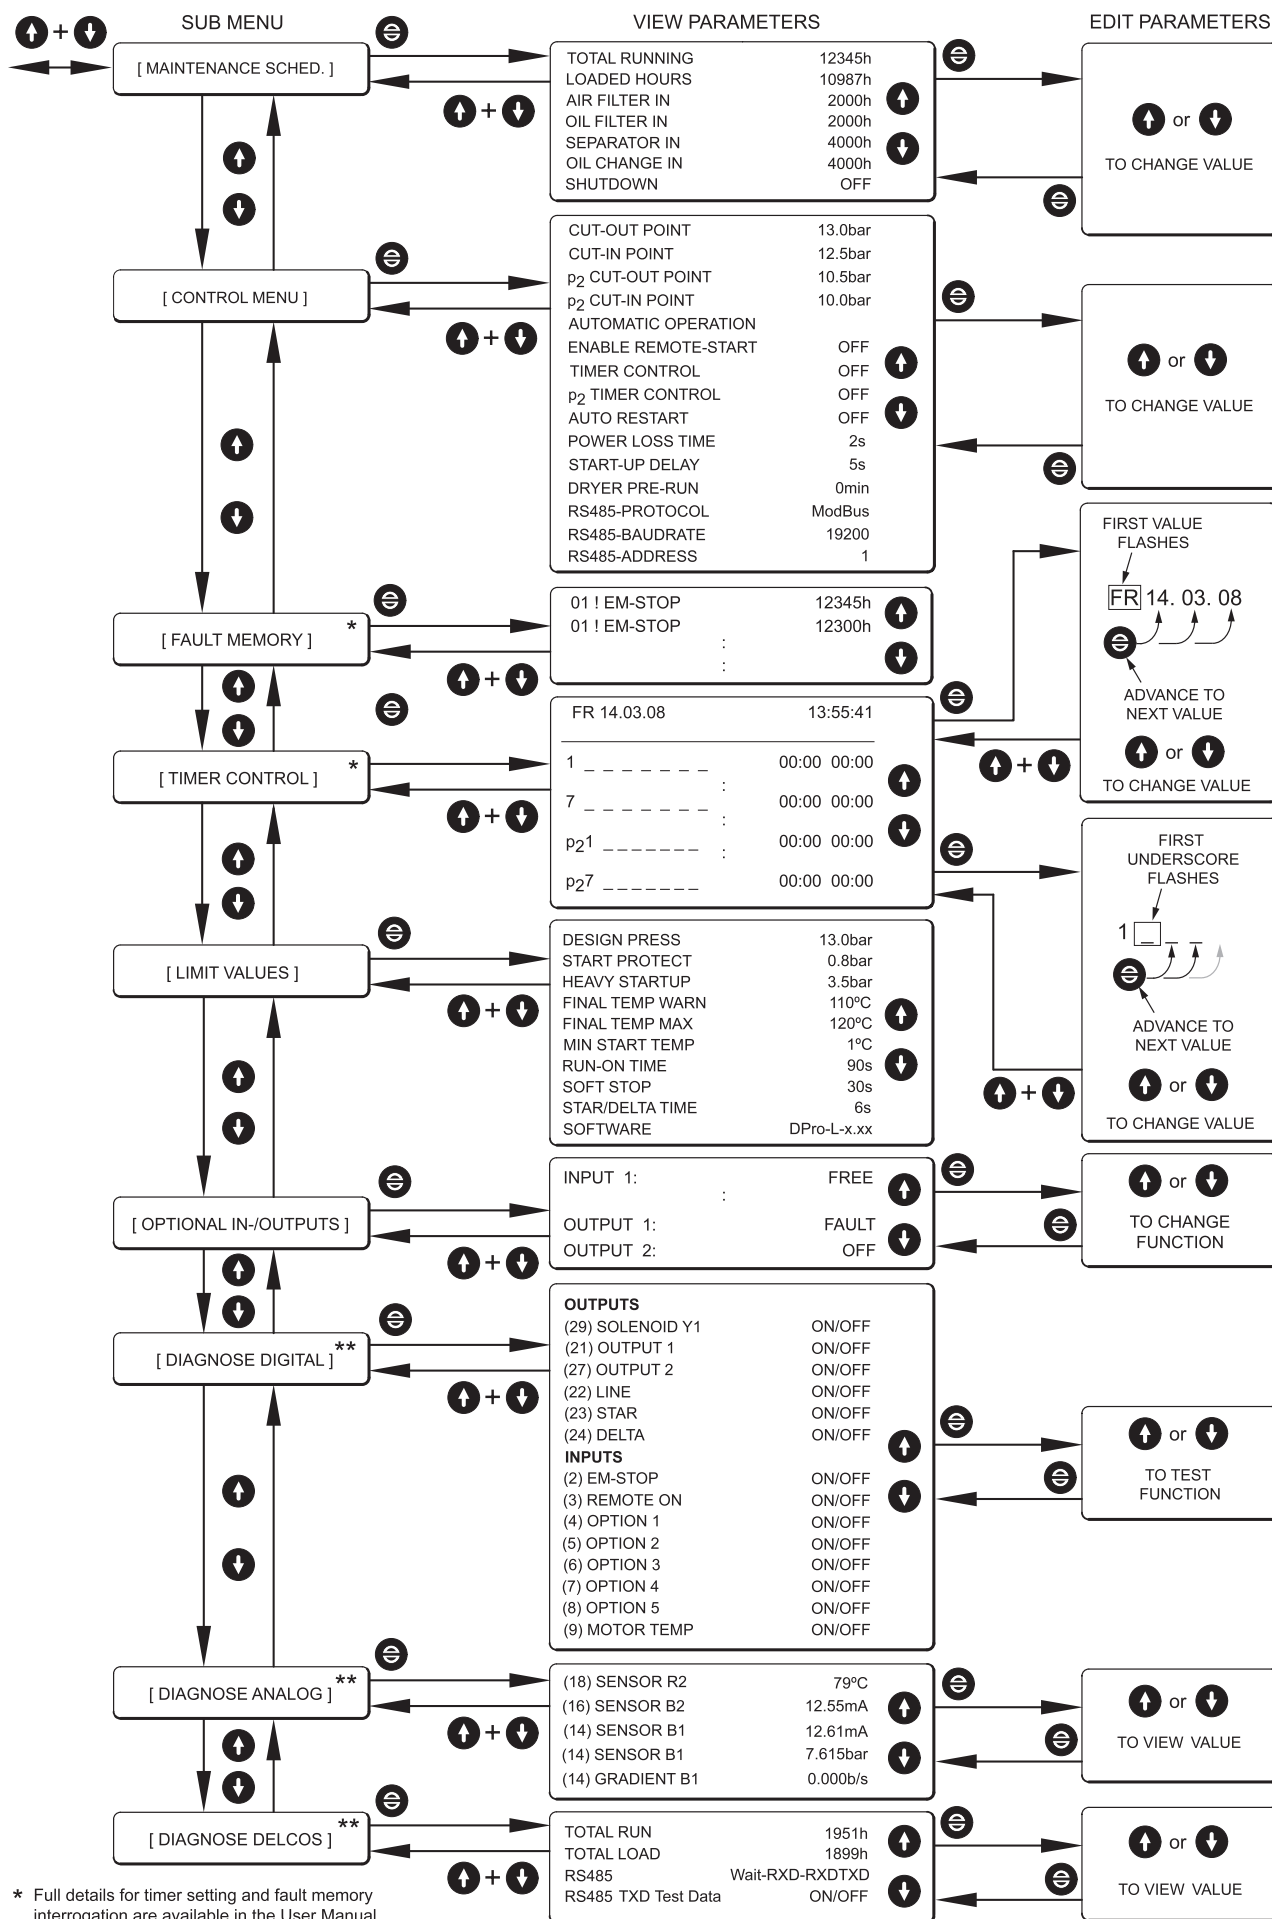

* Full details for timer setting and fault memory interrogation are available in the User Manual

** Viewable via Master Access Code only