		1A 	1B 1C	
	STAR GREE RED STOF	O hydrovan www.hydrovaneproducts.com	Pro 8.3 bar G 4711h ON LOAD ENTER	
		LINE 1	LINE 2 LINE 3	
Key to Status & Message Display			Language Selection	
Line 1:- 1A. Air End Temperature 1B. Air End Pressure (Optional)		Air End Temperature Air End Pressure (Optional)	Press and together. Press and hold and scroll to the required language using for t	
Note: Line 1 may also contain following symbols:-			Access Codes	
	P <sub>2</sub>	(2nd pressure range/timer active) (Remote start/stop activated)	Read Only3031Parameter Reset2222Service Code0647	
Line 2:- View/set menu values		w/set menu values	Master Code XXXX	
Line 3:- Status/Warning/Fault Messages		tus/Warning/Fault Messages	Rotation Off 9998 (Optional) Rotation On 9997 (Optional)	
Key to Buttons Po			Power Fail Time 8888	
START UNIT		ИТ	Accessing Menus	
STOP UNIT		Т	Press and buttons together to:-	
0	UP:	Scrolls Up in Menu Routines / Increases a value	<ul> <li>Call up or exit the main menu</li> <li>Exit a sub-menu or cancel parameter change</li> <li>Press O to enter a sub-menu.</li> </ul>	
0	DOWN:	Scrolls Down in Menu Routines / Decreases a value	Main Menu Structure	
0	RESET:	Enter Key (,-) in sub-menus Resets Faults & Warnings /	Maintenance Sched. Control Menu Fault Memory	
Key to L.E.D.s			Limit Values	
Green L.E.D.		Flashing: Unit in standby Steady: Unit running	Optional In-Outputs — Extended Menus *	
Red L.E.D.		Flashing slowly: Warning/Service Due (See display line 3) Flashing rapidly: Fault - Shutdown (See display line 3)	Diagnose Digital Diagnose Analog Diagnose HV Pro * Viewable via Master Access Code only See overleaf for details of Main and Extended Menus	

CC1078894





\*\* Viewable via Master Access Code only