


GD Pilot Reference Guide

Gardner
Denver

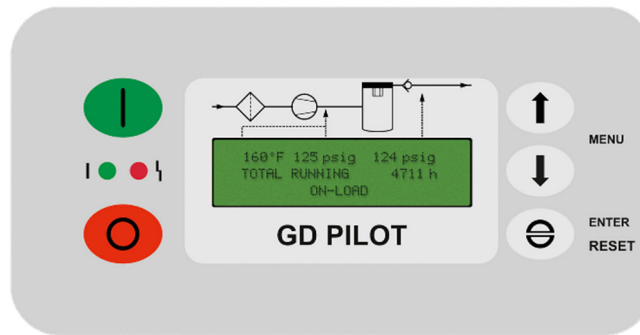

Key to Status & Message Display

1st Line: Air End Discharge Temperature
Compressor Pressure (Internal)
Compressor Pressure (External)

Note: 1st line may also contain following symbols:
P2 (2nd pressure range/timer active)
⚡ (Remote Start/Stop activated)

2nd Line: View/Set menu values

3rd Line: Status/Warning/Fault Messages

Key to Buttons

Start Unit

Stop Unit

UP: Scrolls up in menu/increases a value.

DOWN: Scrolls down in menu/decreases value.

ENTER/RESET: Resets faults/warnings. Enter key in menus. Press and hold for 5 seconds on the home screen to bring up the password selection screen.

Key to L.E.D.s

Green L.E.D.

Flashing: Unit in standby

Steady: Unit running

Red L.E.D.

Flashing slowly: Warning/Service Due (See 3rd line of display)

Flashing rapidly: Fault/Shutdown (See 3rd line of display)

Language Selection

Press and hold button. Scroll to the desired language with the or buttons.

Note: To adjust °C/Bar to °F/PSI change language from English (GB) to English (US).

Access Codes

User	3022 (Lock/Unlock)
Technician	3002
Specialist	0102
Setup Code	2213 (Defaults Controller)
∞ Auto Restart	8879

Accessing Menus

Press & buttons together to:

- Call up or exit the main menu
- Exit a sub-menu

Press button to enter a sub-menu.

Main Menu Structure

Main

Maintenance Sched.
Control Menu
Fault Memory
Timer Control
Limit Values
Optional In/Outputs

Extended Menus*

Diagnose Digital
Diagnose Analog
Diagnose Delcos
* Viewable via Specialist code only

